



ECM MADE EASY™



EVERGREEN® ROTATION REVERSING HARNESS

CATALOG # 5K016



The Evergreen Rotation Reversing Harness should only be used with the motors listed below.

Evergreen IM motors: 6005 and 6010

Evergreen EM motors: 6103E, 6105E, 6107E, 6110E, 6203E, 6205E, 6207E, and 6210E

Evergreen CM motors: 6703, 6705, 6707, and 6710

Evergreen VS motors: 6503V, 6505V, 6507V, and 6510V

All of the motors listed above are equipped with rotation sensing technology. Only use this harness if you have verified that the Evergreen motor is not running the correct rotation for your system.

Directions for installing the rotation reversing harness:

1. Make sure there has been no line voltage connected to the motor for at least 5 minutes.
2. Remove the two (2) ¼" hex head control bolts (FIGURE 1).
3. Disconnect the motor from the motor control (FIGURE 2).
 - a. Gently pull the motor control away from the motor to expose the motor harness.
 - b. Disconnect the motor harness from the motor control by depressing the latch on the 3-pin plug.
 - c. Use the supplied zip tie and wrap it around the motor harness on the X-brace location closest to the motor lead exit (FIGURE 3).
 - d. Cut zip tie so there is no excess plastic.
4. Connect the reversing plug to the motor and motor control (FIGURE 4).
5. Re-install the motor control and bolts.



FIGURE 1



FIGURE 2



FIGURE 3

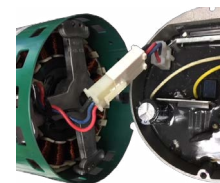


FIGURE 4



Regal Beloit America, Inc.

1325 Heil Quaker Blvd.

LaVergne, TN 37086

Phone Number: 800-672-6495

Fax: 800-468-2062

www.ECMMadeEasy.com

APPLICATION CONSIDERATIONS

The proper selection and application of products and components, including the related area of product safety, is the responsibility of the customer. Operating and performance requirements and potential associated issues will vary appreciably depending upon the use and application of such products and components. The scope of the technical and application information included in this publication is necessarily limited. Unusual operating environments and conditions, lubrication requirements, loading supports, and other factors can materially affect the application and operating results of the products and components and the customer should carefully review its requirements. Any technical advice or review furnished by Regal Beloit America, Inc. and/or its affiliates ("Regal") with respect to the use of products and components is given in good faith and without charge, and Regal assumes no obligation or liability for the advice given, or results obtained, all such advice and review being given and accepted at customer's risk.

For a copy of our Standard Terms and Conditions of Sale, please visit <https://www.regalbeloit.com/Terms-and-Conditions-of-Sale>. These terms and conditions of sale, disclaimers and limitations of liability apply to any person who may buy, acquire or use a Regal product referred to herein, including any person who buys from a licensed distributor of these branded products.

